


INSTRUCTIONS FOR CHANGING OLD DB9 COMM PORT
TO NEW TERMINAL BLOCK

DB 9 CONNECTOR
VIEWED FROM REAR
(WIRE SIDE)

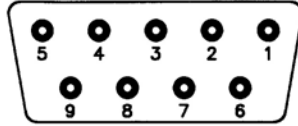

REMOVE/CUT WIRES FROM EXISTING DB9
AND FASTEN TO TERMINAL BLOCK
POSITIONS WITH THE SAME NUMBER
AS MARKED ON THE CIRCUIT BOARD

9-9
8-8
5-5
4-4
3-3

LSI CONTROLS INC.
11664 ORCHARD RD.
WAYNESBORO, PA 17268
717.762.2191
frickparts@lsi-controls.com
www.lsi-controls.com